

# REV JAMS

## BTS400 User's Guide



The pictures are for reference only and may differ from the actual product

For optimal performance of this device, please take the time to follow the instructions in this users guide carefully. It will help you to properly use your new RevJams product and enjoy its features. Please save this users guide for future reference.


### **What's in the Box?**

Make sure the following items are enclosed in your package.

- RevJams DISCOTEK Wireless Bluetooth Speaker
- Users Guide
- Micro USB charging cable

### **Control Panel Instructions**

There are 5 buttons, 2 ports and 1 switch located on the panel which is defined below:

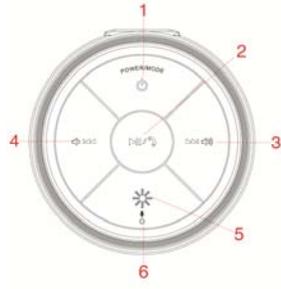

**1.** 

Briefly press to Power On/ Pair/Connect to the device.  
Press and hold to disconnect paired device.

**2.** 

Press this button ONCE to play/pause;  
When there is an incoming call, briefly press to answer/end the call  
Press and hold to reject the call

3.  / 

Briefly Press this button to go to the next track, or press and hold to increase volume.

4.  / 

Briefly Press this button to go to the previous track, or press and hold to decrease volume.

5. 

Press this button to switch to the different preset LED modes.

6. 

The microphone for hands-free function.



1. OFF/ON: Power switch

2. DC 5V: DC 5V port for charging the built-in lithium battery.

3. AUX IN: External audio source input (Spec: 3.5mm jack)

4.  : Charging indicator light

5.  : Function indicator light

### **Light indicator status:**

Status	Indicator
Charging	Red Light
Charging complete	No Light
Bluetooth Pairing Mode	Blue Light
AUX Function in use	Green light

### **Getting started**

To start using your RevJams DISCOTEK Wireless Bluetooth Speakers, please follow the steps below:

1. Ensure that your Bluetooth Speaker is fully charged.
2. Pair your Bluetooth Speaker with a Bluetooth-enabled device prior to use (See Pairing to Bluetooth Devices instructions) or connect via a 3.5mm AUX cable

### **Charging your Bluetooth Speaker**

Your RevJams Wireless Bluetooth Speaker comes with a built-in rechargeable battery and a Micro USB charging cable.

The speaker can be charged either directly from an AC power supply (not included) or through your PC via a micro USB cable (included). The battery indicator will turn red when charging and turn off once charging is complete. Initial charging time is approximately 3-5 hours.

The device may not work properly during charging, so please ensure to fully charge the battery and disconnect the Micro USB cable before use.

## Pairing to Bluetooth Devices

In order to use your RevJams DISCOTEK Bluetooth Speaker with a Bluetooth-enabled device, you will first need to pair the two.

1. Place the speaker and the mobile phone where they are easily viewable and no more than 3 ft. (1M) apart.
2. Ensure that the speaker is fully charged
3. Slide the Power “OFF/ON” switch to the “ON” position to power on the device.
4. Briefly Press the Power  button, the speaker lights will turn blue and a chime will be heard indicating that you are in Pairing Mode
5. Activate your mobile phone's Bluetooth pairing function.
6. Set the mobile phone to search for Bluetooth devices within range and select “BTS400” from the list of devices shown

## Operating Instructions

### Powering on:

Fully charge the RevJams DISCOTEK Bluetooth Speaker via a Micro USB connection, slide the Power “OFF/ON” switch to the “ON” position, and then press the  button to Power On, Connect or Pair.

### Bluetooth playback mode:

Once your device is powered on, the device enters Bluetooth Pairing mode by default and starts scanning automatically.

- 1). Keep your mobile phone within 3 ft (1M) from the device;
- 2). Enable the Bluetooth function on your mobile phone and start searching for Bluetooth device (refer to the operating instruction of your mobile phone for details);
- 3). In the list of the Bluetooth devices list select “**BTS400**” and click Connect;
- 4). If your mobile phone requires you to enter the password, please enter “0000” and confirm to pair the phone and the device;

- 5) Make sure your phone is within 33ft (10M) from the device without any barriers between them. Now you can play the music on your mobile phone via the device;
- 6) Press the “▶||/🔊” button to play/pause the music. Press the “◀◀/🔊” or “▶▶|/🔊” button to select previous/next track.

#### **Bluetooth connection mode:**

If the Bluetooth icon does not appear on your mobile phone screen before use, please activate the Bluetooth connection by following these steps:

- (1) Select “**BTS400**” from Bluetooth devices list and click Connect;
- (2) Select “Pairing” on your mobile phone;
- (3) To disconnect the Bluetooth, press and hold the “▶||/🔊” button, or select Disconnect on your mobile phone, the Bluetooth will go to standby mode. At this time you can connect to another mobile phone for Bluetooth device.

#### **Hands free function:**

##### **Answer a call:**

In Bluetooth mode, when there is an incoming call, you will hear the ring tone through the speaker of the device. At this time press the “▶||/🔊” button to answer the call.

##### **End a call:**

In hands free state, press the “▶||/🔊” button the end a call and return to music playback mode.

##### **Reject a call:**

When there is an incoming call, press and hold the “▶||/🔊” button for more than 3 seconds to reject the call.

#### **AUX IN mode:**

When the device is powered on, if you connect a 3.5mm AUX audio cable to the AUX IN port on the device, it will switch to AUX IN mode. In such case, connect

the audio cable of the external audio source such as MP3/CD to the AUX IN port of the device to play the music on it (please properly adjust the volume of the external audio source and start playing on the audio source).

**Volume adjustment:**

When the device is powered on, under any playback mode, press and hold the “◀◀/◀” button to decrease volume; press and hold the “▶▶/▶” button to increase volume .

**LED Light mode function:**

When the Speaker is playing music, each time you press the “\*” button on the speaker the light color scheme will change. The colors can be switched to multiple preset display modes. The user can press the “\*” button on the speaker to select a different light mode according to their preference and enjoy the dynamic LED lights.

Also the user can press and hold the “\*” button for 2-3 seconds to turn the light display off and just listen to music. To turn the light display back on the user can press “\*” button again to resume the light display.

**Function switch mode:**

- A. When no AUX cable is connected, you cannot switch function by pressing the “⏻” button and it will remain in Bluetooth mode only.
- B. When an AUX cable is connected, press the “⏻” button to switch modes among: “Bluetooth”→“AUX IN”.
- C. Under any playback mode, an AUX cable is connected, the device will switch to the last inserted or connected function.

**Power off:**

When the device is on, press and hold the “⏻” button turn the device to standby mode, or slide the “OFF/ON” switch to the “OFF” position to completely power off the device.

### **Troubleshooting**

If you are unable to connect your Bluetooth Speaker and mobile phone, please try the following:

Ensure that your speaker is fully charged and powered on.

Ensure that the speaker is paired with your mobile phone.

Ensure that your speaker is not paired with another mobile phone or Bluetooth enabled device in close proximity

Ensure that your mobile phone's Bluetooth feature is activated. Please refer to your mobile phone user guide for specific instructions.

Ensure that the speaker is within a 10 meter (30 ft.) range of your mobile phone and that there are no obstructions, such as walls or other electronic devices, between the two.

If your device is already paired , try deleted from Bluetooth paired devices and re-pairing it

If the above steps do not solve your problem, please remove your mobile phone battery for a short time and recharge the speaker. Repeat the troubleshooting sequence.

### **Warranty**

At RevJams, we are dedicated to making the best quality product we can. To back this up, your RevJams Bluetooth Speaker is warranted for One (1) full year from the date of purchase.

Should you require additional information or have any questions about your product , please contact us via email at [customerservice@revjams.com](mailto:customerservice@revjams.com)

### **Safety Information**

Read these instructions – for all components before using this product.

Keep these instructions – for future reference.

Follow all instructions. – On the product and in the owner's guide.

Do not use this apparatus near water or moisture –Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water is present.

Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.

Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.

Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Unplug this apparatus during lightning storms or when unused for long periods of time – to prevent damage to this product.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped – Do not attempt to service this product yourself. Opening the enclosure may expose you to dangerous voltages or other hazards.

To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

Do not let objects or liquids enter the product – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

### **Warning and Cautions**

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on or near the product. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.

The power supply must be used indoors only. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.

Make no modifications to the product or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.

Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.

Do not place any naked flame sources, such as lighted candles, on or near the apparatus. The battery is only intended for use with the power supply or charger provided with the system. Refer to charging instructions in the system owner's guide. Do not continue charging the battery if it does not reach full charge within the 5 hours. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery.

Do not attempt to charge the battery in temperatures outside the range of 32°-104°F (0°-40°C).

Keep batteries out of the reach of children and pets.

If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical advice immediately.

Do not expose the product or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 140°F (60°C). Doing so may cause the battery and power supply to generate heat, rupture, or ignite. Using the product in this manner also may result in a loss of performance and a shortened life expectancy.

If the battery is damaged and ignites, do not use water to extinguish flames. Instead, use a functioning fire extinguisher.

Do not step on, throw, or drop batteries or the power supply or expose them to a strong shock. Do not pierce, crush, dent, or deform the batteries or power supply in any way. If either becomes deformed, properly dispose of it.

Do not short-circuit batteries. Avoid storing them around metal objects such as keys, pocket change, paper clips, and jewelry.

Do not dismantle, open, or shred the battery.

The cells in the batteries perform best when operating at normal room temperature, 70°F (20°C)

### **Product Specifications**

Connection distance	≥ 30ft (10M)
Operating frequency range:	2.4GHz-2.480GHz
Speaker impedance:	4Ω
Dimensions:	H 186× DIA 81(mm)
Weight:	17.5 oz. (Product only)
Power Output:	2W×2
Power Supply:	5V
Charging current:	500mAh-2A
Battery specs:	3.7V/1600mAh
Normal use duration:	Up to 5 hours (At 70% of full volume)
LED lights:	24 pcs lights; 6 colors, 7 different effect modes